

BASECAMP™ SERIES

BOARD ROOM™

Assembly Instructions

These instructions alone do not guarantee durability and safe use of this product. Read the Users Manual or go to www.msrgear.com/tents.

PACKAGE INCLUDES:

2 guy cords, 2 tensioners, 10 Rockbuster™ stakes, 1 repair sleeve



MOUNTAIN SAFETY RESEARCH ©

© 2009 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA
1-800-531-9531 or 1-206-505-9500

1

PREPARE FOR SETUP

1. Spread out tent with floor on ground and stake out.
2. Unfold poles; let shock cord pull sections together.

**2**

INSERT MAIN POLES

1. Thread four pre-curved poles through sleeves going across width of tent.
2. Insert pole tips into grommets in stake loops.

**3**

INSERT SILVER POLES

1. Thread two silver poles lengthwise through two holes in ribs, forming an "X" at center ceiling of tent.
2. Put silver pole tips into grommets at awning and use adjuster straps to secure both poles.

CAUTION: At this point your tent is susceptible to wind damage. Read and understand the staking and guy-out chapter in Users Manual.

