

BASECAMP™ SERIES




MO ROOM™ 3

Assembly Instructions

These instructions alone do not guarantee durability and safe use of this product. Read the Users Manual or go to www.msrgear.com/tents.


PACKAGE INCLUDES:

2 guy cords, 2 tensioners, 13 Groundhog™ stakes, 1 repair sleeve


MOUNTAIN SAFETY RESEARCH® © 2009 Cascade Designs, Inc.
 4000 First Avenue South
 Seattle, WA 98134 USA
 1-800-531-9531 or 1-206-505-9500


1 SETUP TENT

1. Spread tent out; stake out four corners.
2. Thread 2 main poles (equal length, without hook ends) into pole sleeves, round end first.

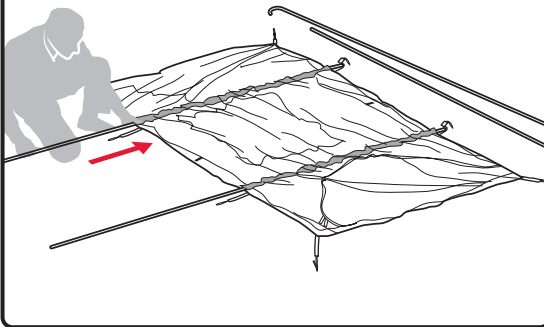


2 ASSEMBLE TENT FRAME

1. Insert pole tips into grommets on stake loops.
2. Thread poles with hook ends (one hook at each end of tent) through openings in pole sleeves along length of tent, making sure poles also go through the web loop next to each opening.

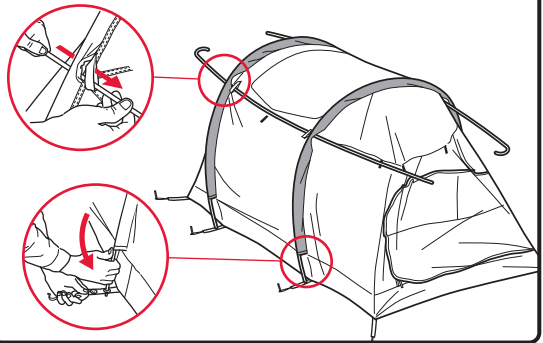

3 ATTACH BOWFRAME™ POLE

1. Grab a pole end in each hand and bend them inward toward each other; insert hook end into open end of other pole. Repeat at opposite end of tent.
2. Starting with the BowFrame pole at either end of tent, attach clips to point of BowFrame pole.

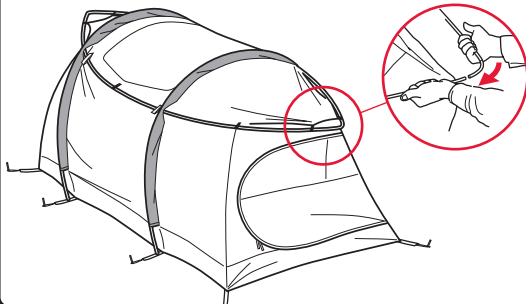

4 ATTACH RAINFLY

1. Thread vestibule pole into sleeve on underside of fly; insert pole tips into grommets.
2. Lay rainfly over tent; set BowFrame pole end into fly pocket, clip and tighten buckles at all stake loops.
3. Pull out front and rear vestibules until taut and stake down.

NOTE: Vestibules are identical, so rainfly can go on in either direction.

