

**BASECAMP™ SERIES**

# OUTFITTER WING™

## Assembly Instructions

These instructions alone do not guarantee durability and safe use of this product. Read the Users Manual or go to [www.msrgear.com/tents](http://www.msrgear.com/tents).

**PACKAGE INCLUDES:**

7 guy cords, 7 tensioners, 7 Rockbuster™ stakes



MOUNTAIN SAFETY RESEARCH®

© 2009 Cascade Designs, Inc.


4000 First Avenue South

Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500


### 1 PREPARE FOR SETUP

1. Spread tent out and tie seven cords to wing's seven points.  
**NOTE:** Longest cord gets attached to front point of wing.

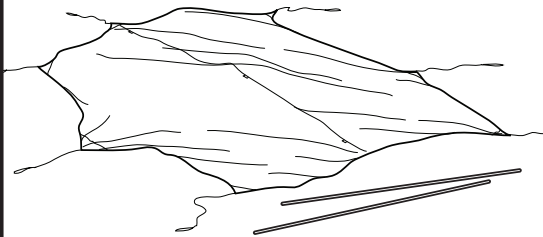

### 2 INSERT POLES

1. Stake out two rear cords loosely and insert rear pole into grommet or webbing loop.
2. Keeping tension on wing, walk to the front and insert second pole into grommet on webbing; stake out front cords.

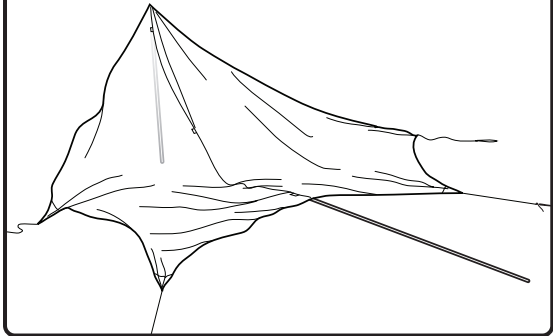

### 3 STAKE OUT WING

1. Stake out all remaining cords until wing is taut.

