

FAST & LIGHT® SERIES

CARBON REFLEX™ 2

Assembly Instructions

Please follow these instructions to guide you through assembly only.
For complete instructions on the recommended care and use of your tent,
please refer to the User's Manual at www.msrgear.com/tents.

PACKAGE INCLUDES:

2 guy cords, 2 tensioners, 8 Needle™ stakes, 1 repair sleeve




MOUNTAIN SAFETY RESEARCH®

© 2009 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500

1 PREPARE FOR SETUP


1. Spread tent out; stake out four corners tightly.

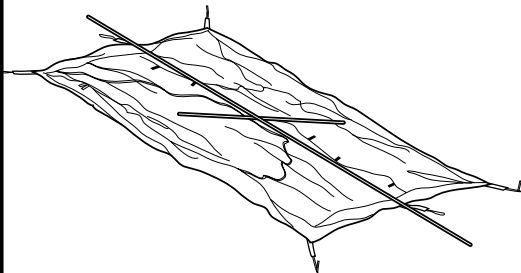

CARBON FIBER POLE CARE: For maximum longevity of carbon poles, avoid crushing them and prolonged exposure to abrasion. Always unfold poles carefully, ensuring each section is fully connected before assembling tent. With proper care, carbon fiber poles will last the life of your tent.


2 ASSEMBLE TENT FRAME

1. Insert tips of main pole into grommets at one end of tent floor then the other.
2. Insert short cross pole into two grommets at midpoint of tent ceiling.

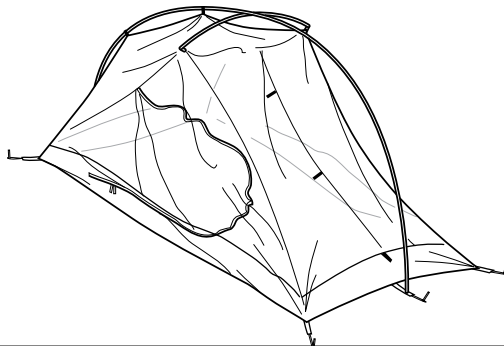

3 ATTACH CLIPS

1. Attach clips to pole along length of tent.

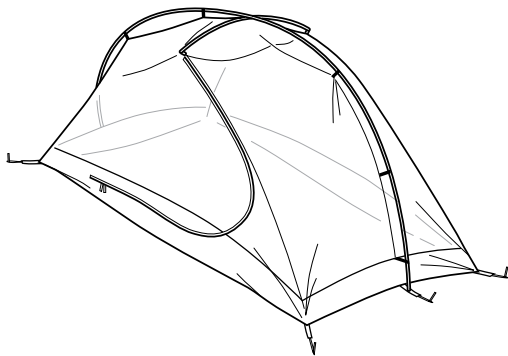

4 ATTACH RAINFLY

1. Lay rainfly over tent and attach midpoint fly grommets to short cross pole.
2. Clip and tighten buckles at all stake loops.
3. Pull out vestibules until taut and stake down.

