

BASECAMP™ SERIES

ELBOW ROOM™ 3

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to the User's Manual at www.msrgear.com/tents.

PACKAGE INCLUDES:

2 guy cords, 2 tensioners, 8 Groundhog™ stakes, 1 repair sleeve




MOUNTAIN SAFETY RESEARCH®

© 2009 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500


1 SETUP TENT

1. Spread tent out; stake out four corners.
2. Thread 2 main poles (without hook ends) into pole sleeves, round end first, at corners and insert pole tips into grommets on stake loops.

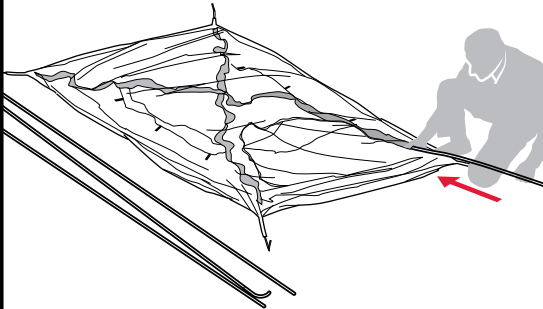


2 ASSEMBLE TENT FRAME

1. Thread poles with hook ends (one hook at each end of tent) through openings in pole sleeves along length of tent, making sure poles also go through the web loop next to each opening.

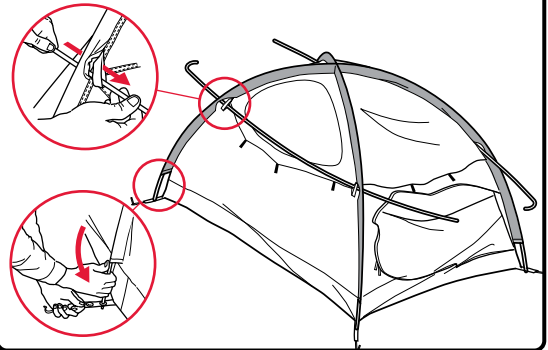

3 ATTACH BOWFRAME™ POLE

1. Grab a pole end in each hand and bend them inward toward each other; insert hook end into open end of other pole. Repeat at opposite end of tent.
2. Starting with the BowFrame pole at either end of tent, attach clips to point of BowFrame pole.

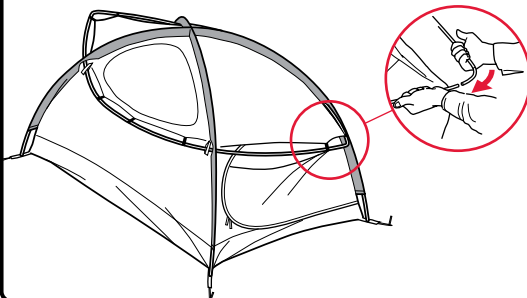

4 ATTACH RAINFLY

1. Lay rainfly over tent; set BowFrame pole end into fly pocket, clip and tighten buckles at all stake loops.
2. Pull out front and rear vestibules until taut and stake down.

