

FAST & LIGHT® SERIES

TWING™

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to the User's Manual at www.msrgear.com/tents.

PACKAGE INCLUDES:

2 guy cords, 2 tensioners, 6 Needle™ stakes




MOUNTAIN SAFETY RESEARCH®

© 2009 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500


1 PREPARE FOR SETUP

1. With MSR® logo showing through fly, spread out shelter into a large rectangle.
2. Shorten two pre-attached guy cords to minimum length and stake out diagonally from ends.

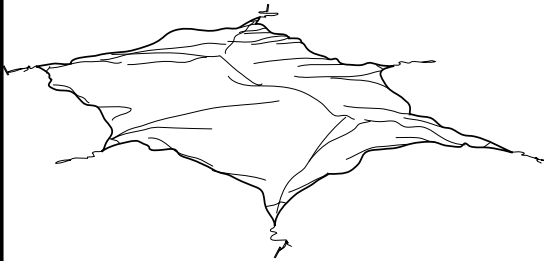

2 INSERT TREKKING POLES

1. Set poles to a height of 48".
2. Place vertically inside shelter with handles at peaks where seams converge; adjust pole height if needed.

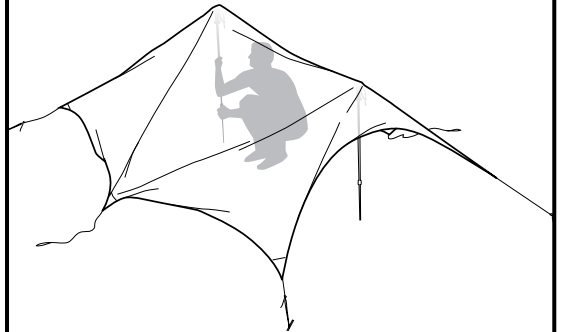

3 STAKE OUT WING

1. Stake out sides.

