

BASECAMP™ SERIES

VISTA WING™

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to the User's Manual at www.msrgear.com/tents.

PACKAGE INCLUDES:

7 guy cords, 7 tensioners, 7 Groundhog™ stakes




MOUNTAIN SAFETY RESEARCH®

© 2009 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA
1-800-531-9531 or 1-206-505-9500

1 PREPARE FOR SETUP


1. Spread tent out and tie seven cords to wing's seven points.

NOTE: Attach longest cord to front point of wing.

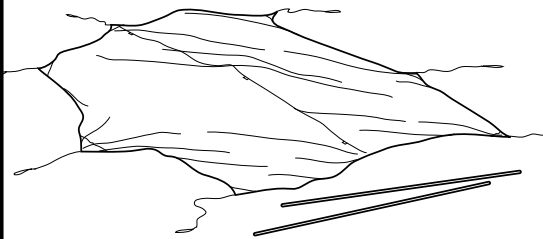

2 INSERT POLES

1. Stake out two rear cords loosely and insert rear pole into grommet or webbing loop.
2. Keeping tension on wing, walk to the front and insert second pole into grommet on webbing; stake out front cords.

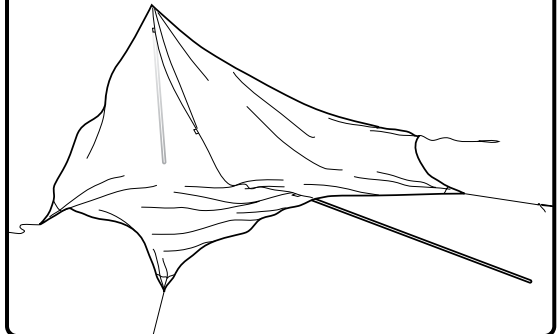

3 STAKE OUT WING

1. Stake out all remaining cords until wing is taut.

