



BACKCOUNTRY BARN™

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at www.msrgear.com/tents/ownersmanual.

PACKAGE INCLUDES:


2 guy cords, 2 tensioners, 8 stakes, 1 repair sleeve



© 2011 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA
1-800-531-9531 or 1-206-505-9500

1 PREPARE FOR SETUP

1. Spread out tent with floor on ground and stake out two corners.
2. Thread three green poles through sleeves going across width of tent and insert pole tips into outer grommet in stake loop. Connect clips to poles.
3. Thread two gray poles through holes in gray tunnels, forming an "X" at top center of tent. Connect clips to gray pole.

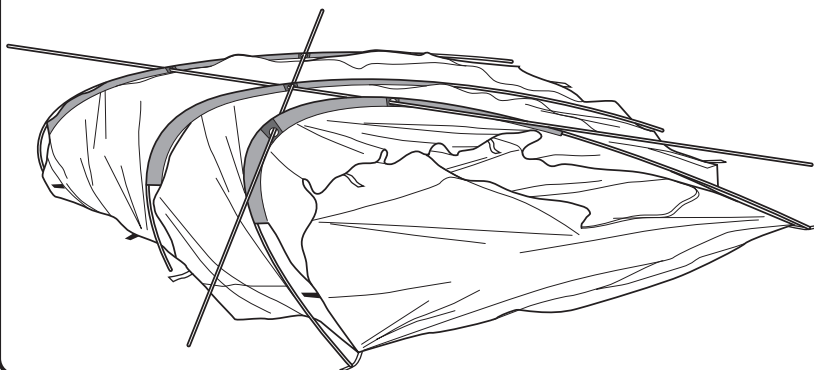


2 RAISE TENT

1. Stand green poles upright.
CAUTION: At this point your tent is susceptible to wind damage. Read and understand the staking and guy-out chapter in Owner's Manual.





3 TENSION GRAY POLES

1. Stake out remaining stake loops on tent.
2. Put gray pole tips into grommets at awning and use adjuster straps to secure both poles.

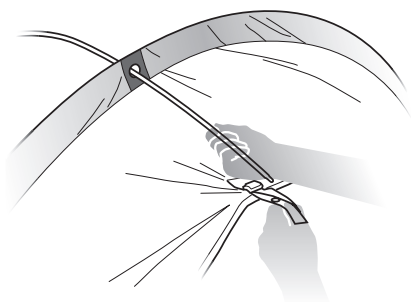

Removable floor attachment

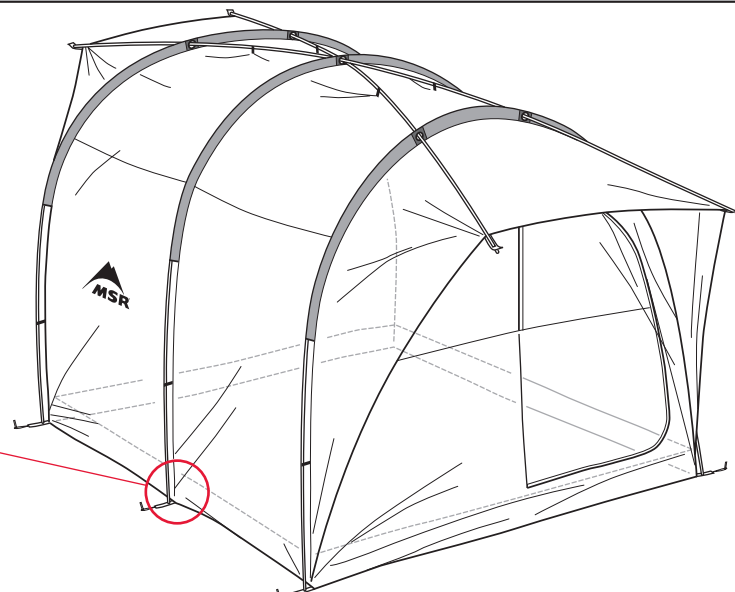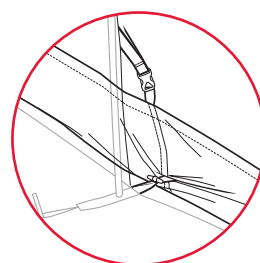

Note: All tents require staking. Unstaked tents are susceptible to blowing away. In some conditions, additional stakes and cord will be necessary. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. Footprints help to keep your tent clean, dry, and protected from abrasion. Following these tips will prolong the life of your tent.