

# CARBON REFLEX™ 1

## Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at [www.msrgear.com/tents/ownersmanual](http://www.msrgear.com/tents/ownersmanual).

### PACKAGE INCLUDES:

6 stakes, 1 repair sleeve



MOUNTAIN SAFETY RESEARCH®

© 2011 Cascade Designs, Inc.


4000 First Avenue South

Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500

### 1 PREPARE FOR SETUP


1. Spread tent out; stake out four corners tightly.

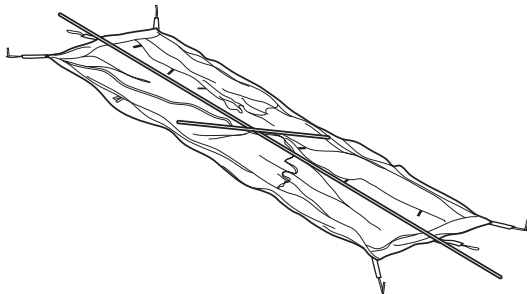

**CARBON FIBER POLE CARE:** For maximum longevity of carbon poles, avoid crushing them and prolonged exposure to abrasion. Always unfold poles carefully, ensuring each section is fully connected before assembling tent. With proper care, carbon fiber poles will last the life of your tent.

### 2 ASSEMBLE TENT FRAME

1. Insert tips of main pole into grommets at one end of tent floor then the other.
2. Insert short cross pole into two grommets at midpoint of tent ceiling.

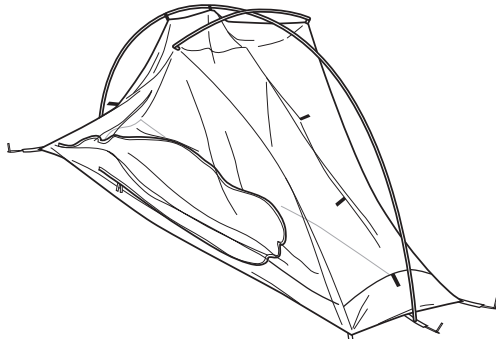


### 3 ATTACH CLIPS

1. Attach clips to pole along length of tent.



### 4 ATTACH RAINFLY

1. Lay rainfly over tent and attach midpoint rainfly grommets to short cross pole.
2. Clip and tighten buckles at all stake loops.
3. Pull out vestibule until taut and stake down.

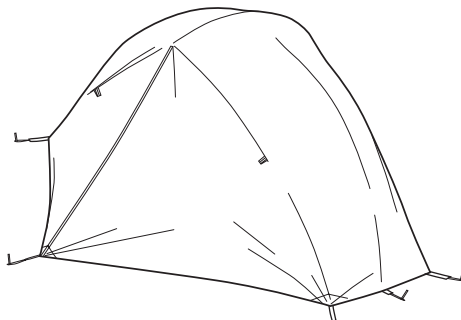

**Note:** All tents require staking. Unstaked tents are susceptible to blowing away. In some conditions, additional stakes and cord will be necessary. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. Footprints help to keep your tent clean, dry, and protected from abrasion. Following these tips will prolong the life of your tent.