



DRAGONTAIL™

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at www.msrgear.com/tents/ownersmanual.

PACKAGE INCLUDES:

2 guy cords, 2 tensioners, 12 stakes, 1 repair sleeve



MOUNTAIN SAFETY RESEARCH®

© 2011 Cascade Designs, Inc.


4000 First Avenue South

Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500


1 PREPARE FOR SETUP

1. Spread tent out with its floor on ground.
2. Stake out four corners.

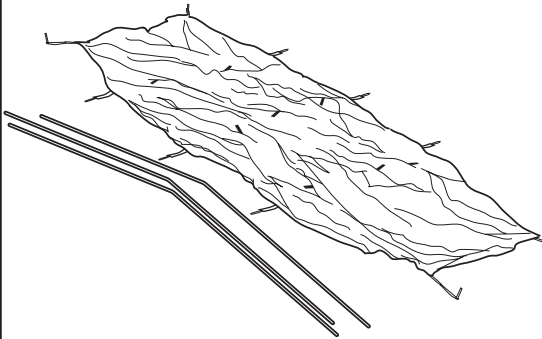

2 SETUP TENT

1. Insert pole tips into grommet in stake loops.
2. Connect clips to poles.

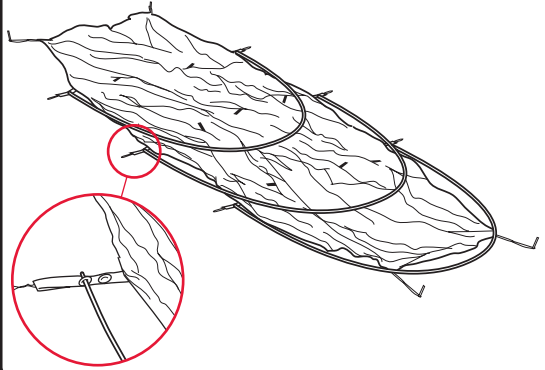

3 STAKE OUT FRONT VESTIBULE

1. Pull out front vestibule until taut and stake down.
2. Stake out remaining stake loops.



Note: All tents require staking. Unstaked tents are susceptible to blowing away. In some conditions, additional stakes and cord will be necessary. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. Footprints help to keep your tent clean, dry, and protected from abrasion. Following these tips will prolong the life of your tent.