



ELIXIR™ 2

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at www.msrgear.com/tents/ownersmanual


PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, 6 stakes, 1 repair sleeve, MSR® Footprint

Fast & Light® setup instructions available online. Watch video setup instructions, including Fast & Light® option, at www.msrgear.com/Elixir2


1 PREPARE FOR SETUP

1. Spread tent out on top of footprint and stake out four corners tightly.
2. Assemble poles.

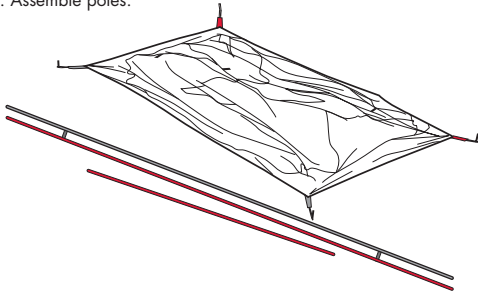


2 ASSEMBLE TENT

1. Insert each red pole tip of main poles into grommets on the stake loops with red webbing.
2. Insert each gray pole tip of main poles into grommets on the stake loops with gray webbing.
3. Attach color-coded clips to like-color pole along entire length of frame assembly.

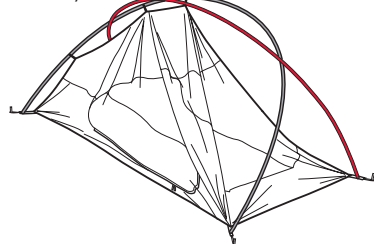


3 ATTACH RIDGE POLE

1. Insert red ridge pole into red grommets above doors, making sure ridge pole rests on top of both red and gray main poles.

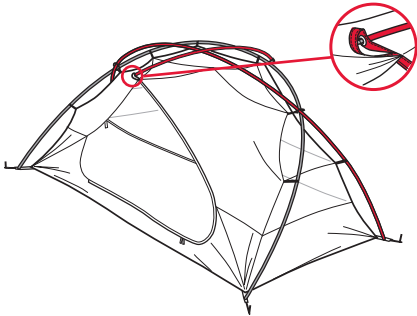

4 ATTACH RAINFLY

1. Lay rainfly over tent. Attach rainfly's midpoint grommets to ridge pole.
2. Clip and tighten all buckles at all stake loops, connecting red webbing with red stake loops, gray webbing with gray stake loops.
3. Stretch out vestibules until taut and stake down, making sure seams align with frame.

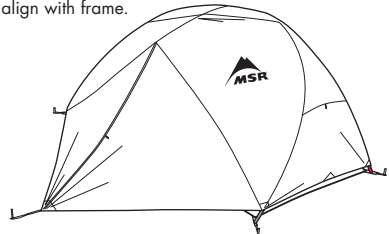

USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Readjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. The included footprint can help keep your tent clean, dry and protected from abrasion. Following these tips will prolong the life of your tent. MSR® offers a full line of accessories to secure, maintain and enhance your tent.



MOUNTAIN SAFETY RESEARCH®

© 2014 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA
1-800-531-9531
1-206-505-9500



ELIXIR™ SERIES

Fast & Light® Setup Instructions
for Elixir™ tents with MSR® Footprint

Congratulations! With the purchase of your Elixir tent, you get a free MSR Footprint to help protect the bottom of your tent or use as part of a Fast & Light setup for minimalist trips.

1 PREPARE FOR SETUP

1. Start by staking out the footprint with the MSR logo facing up.
2. Assemble poles.

2 ATTACH POLES

1. Insert the poles into the footprint's corner grommets to create the same pole structure as standard setup.

3 SECURE RAINFLY

1. Insert ridge pole into rainfly grommets above vestibule doors.
2. Place rainfly over pole structure and buckle at each corner.

4 SECURE TENT

1. Stake out the tent's vestibules and guy out if necessary.