



GEAR SHED™

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at www.msrgear.com/tents/ownersmanual.

PACKAGE INCLUDES:


1 guy cord, 1 tensioner, 4 stakes



© 2011 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA
1-800-531-9531 or 1-206-505-9500


1 PREPARE FOR SETUP

1. Spread out fabric and insert pole into sleeve on Gear Shed vestibule.

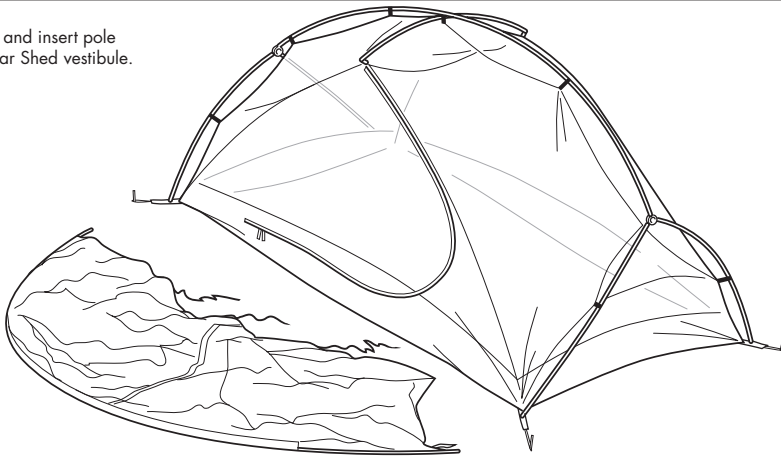

2 SETUP GEAR SHED

1. Attach adjustable loop grommet of Gear Shed vestibule under ends of poles on tent.
2. Attach midpoint grommet to short cross pole on tent. Clip adjustable webbing to tent pole.
3. Attach tent rainfly as normal. Tent rainfly grommet must go on outside of Gear Shed vestibule grommet.

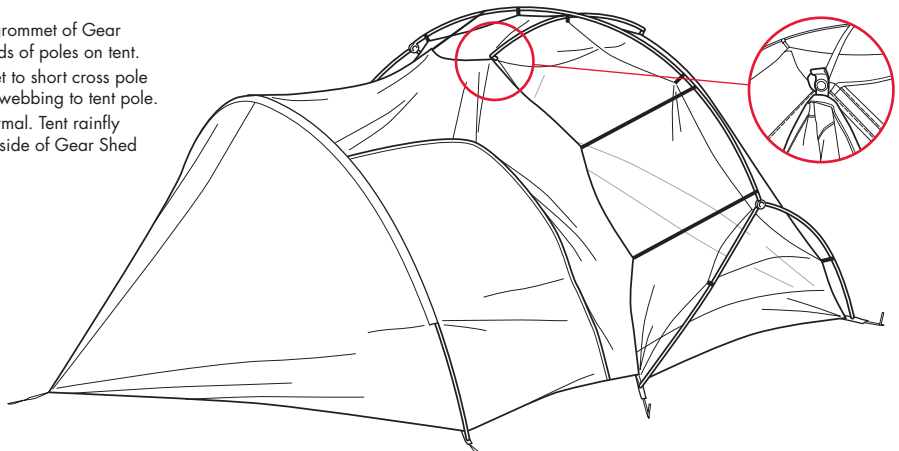

Note: All tents require staking. Unstaked tents are susceptible to blowing away. In some conditions, additional stakes and cord will be necessary. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. Footprints help to keep your tent clean, dry, and protected from abrasion. Following these tips will prolong the life of your tent.