



HOOP™

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at www.msrgear.com/tents/ownersmanual.

PACKAGE INCLUDES:

8 stakes, 1 repair sleeve



MOUNTAIN SAFETY RESEARCH®

© 2011 Cascade Designs, Inc.


4000 First Avenue South

Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500


1 PREPARE FOR SETUP

1. Spread tent out; stake out six stake points tightly.
2. Assemble poles.

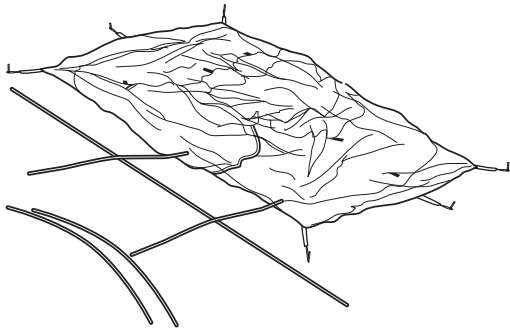


2 ASSEMBLE TENT FRAME

1. Insert tips of main pole into grommets at green center stake loops.
2. Insert short cross pole into grommets above door. Attach clips to pole.

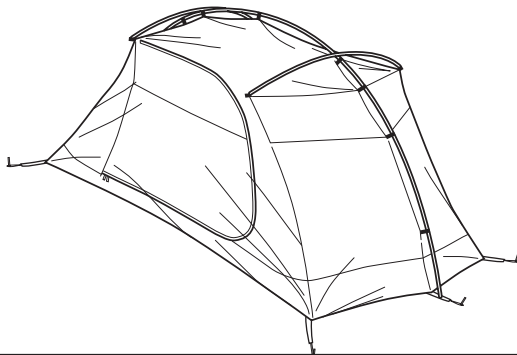


3 OPTIONAL FREE-STANDING POLES

1. Insert bottom gray poles under first clip and insert tips of poles into grommets at corner gray stake loops.

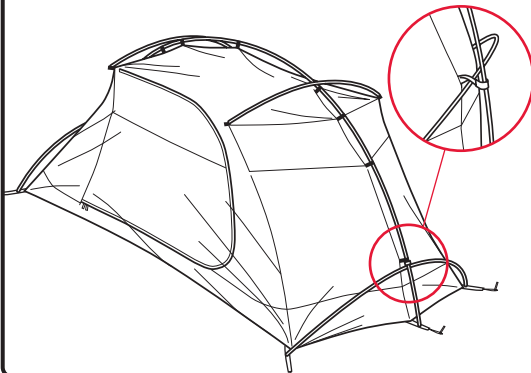

4 ATTACH RAINFLY

1. Lay rainfly over tent and slide adjustable loop grommets under pole tips at all pole tip ends.
2. Clip and tighten buckles at all stake loops.
3. Pull out vestibules until taut and stake down.

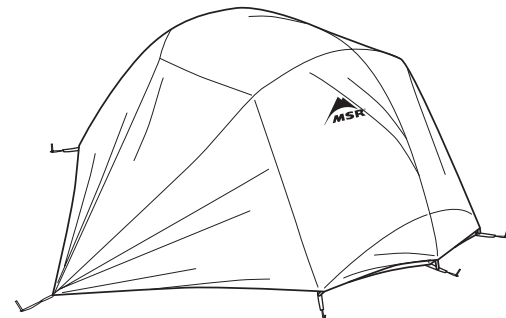

Note: All tents require staking. Unstaked tents are susceptible to blowing away. In some conditions, additional stakes and cord will be necessary. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. Footprints help to keep your tent clean, dry, and protected from abrasion. Following these tips will prolong the life of your tent.