

TWIN SISTERS™

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at www.msrgear.com/tents/ownersmanual.

PACKAGE INCLUDES:

8 stakes




MOUNTAIN SAFETY RESEARCH®

© 2011 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500


1 PREPARE FOR SETUP

1. With doors zipped shut and vent face up, spread tent out into a large rectangle.
2. Stake out four corners; to reduce wear on door zipper, stake door end slightly loose.

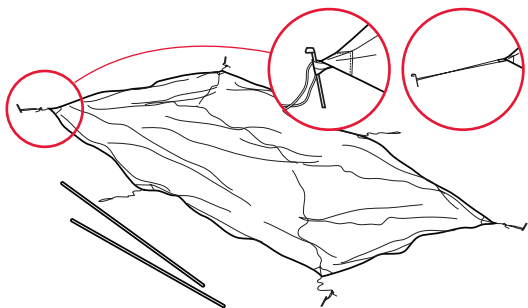


2 INSERT POLES

1. Unzip tent door and place poles vertically inside shelter where seams converge. Adjust pole height if needed by angling pole bases towards center. **NOTE:** To reduce weight, replace poles with trekking poles.

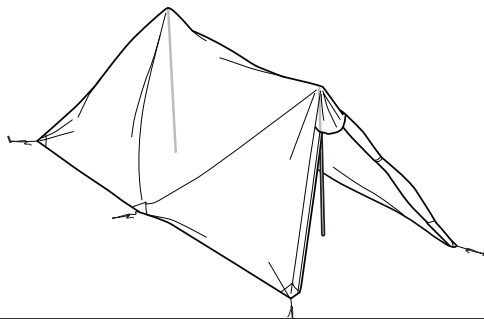

3 STAKE OUT TENT

1. Stake out sides.

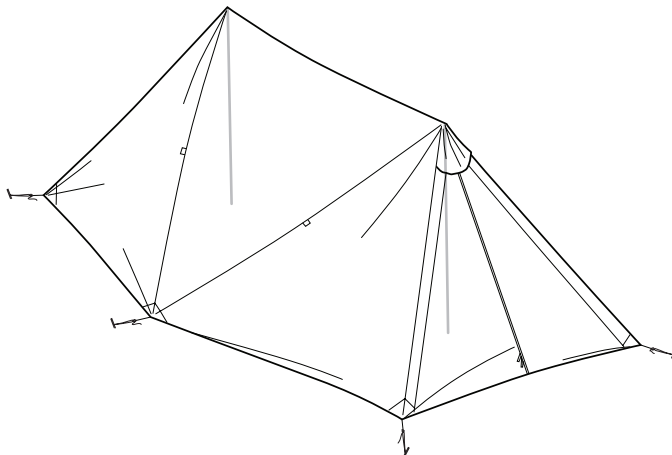

Note: All tents require staking. Unstaked tents are susceptible to blowing away. In some conditions, additional stakes and cord will be necessary. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. Following these tips will prolong the life of your tent.