

ZING™

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at www.msrgear.com/tents/ownersmanual.

PACKAGE INCLUDES:

7 guy cords, 7 tensioners, 7 stakes



MOUNTAIN SAFETY RESEARCH®

© 2011 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA


1-800-531-9531 or 1-206-505-9500

1 PREPARE FOR SETUP

1. Spread Zing tarp out and tie seven cords to tarp's seven points.


NOTE: Longest cord gets attached to front point of Zing tarp.

FRONT

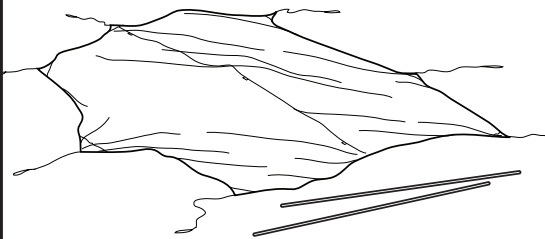


2 INSERT POLES

1. Stake out two rear cords loosely and insert rear pole into grommet or webbing loop.
2. Keeping tension on Zing tarp, walk to the front and insert second pole into grommet on webbing; stake out front cords.

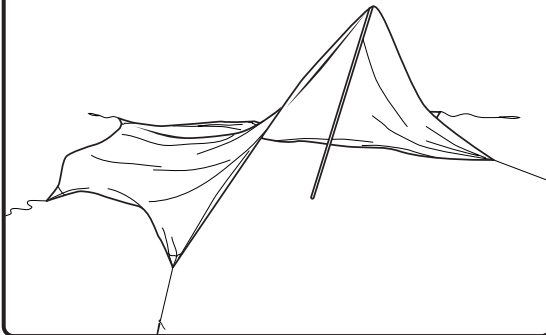


3 STAKE OUT

1. Stake out all remaining cords until tarp is taut.

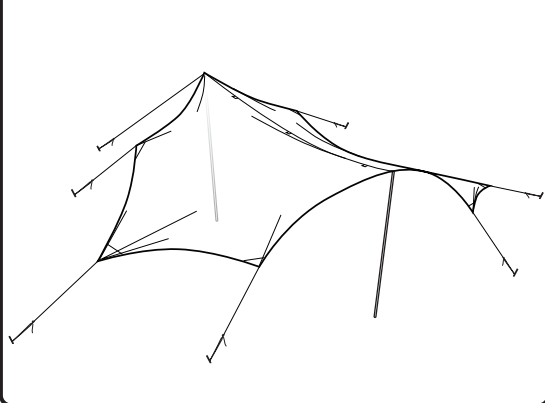

4 OPTIONAL SETUP


1. Using 3 poles in setup.

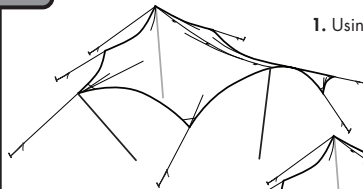

2. Using 4 poles in setup.



3. Using paddles in setup.

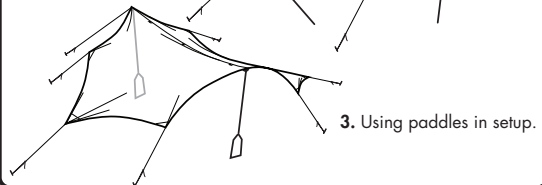

Note: All tents require staking. Unstaked tents are susceptible to blowing away. In some conditions, additional stakes and cord will be necessary. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. Following these tips will prolong the life of your tent.