




# LUXURYLite<sup>®</sup> COT

Assembly instructions for Mesh Cot sizes L and XL


For additional languages (German, Japanese, Spanish, Italian and Dutch), or to watch video setup instructions please visit [thermarest.com/cots/ultralite](http://thermarest.com/cots/ultralite)

## COMPONENTS:

Your LuxuryLite cot includes the following parts:

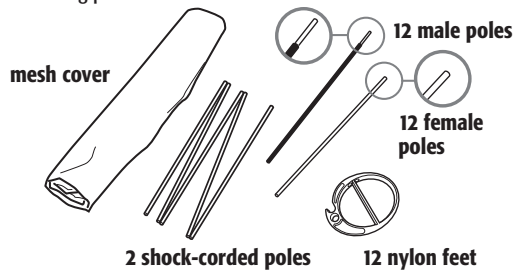


## INSERT SHOCK-CORDED POLES:

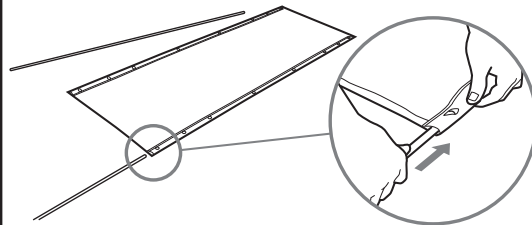

Place the cover on the ground, *underside* facing up. Assemble the shock-corded poles and slide them into the sleeves.

## BUILD A TWIST BOW:

Place a male pole and a female pole into one foot. Repeat the same process with another foot, so the two pieces are *identical*. Connect the male and female poles to create a bow. When assembled correctly the feet will face *opposite* directions. Build six twist bows for standard setup.

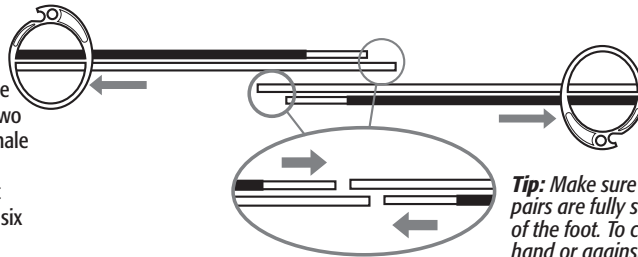


**Tip:** Make sure half-assembled pole pairs are fully seated in the back hole of the foot. To check, tap gently with a hand or against the ground.

## ASSEMBLING THE BOW FRAME:




Before installing, line up poles to make sure they are assembled correctly, with one foot facing up and the other down. Stand at the end of the cover with both your feet on the shock-corded poles. Attach a bow to one of the shock-corded poles using the hook on the nylon foot.

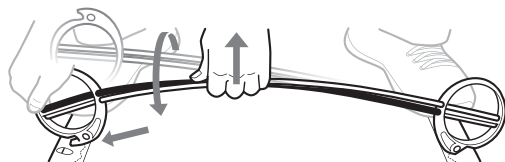

Twist (rotate) the other foot 180 degrees until the hook is facing the cover. Pull the center of the bow away from the cover with one hand while pushing down with the other to hook the second foot.


## STANDARD SETUP: 6 twist bows

For standard setup, use all 6 twist bows. Two slots will be left open at the positions second from the ends of the cover.

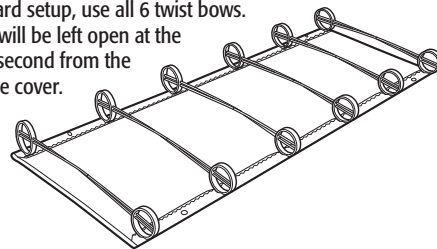

## LIGHTWEIGHT SETUP: 4 single bows

To assemble the cot in the minimum setup, use four bows, placing two in the center slots and two in the slots second from the ends of the cover.

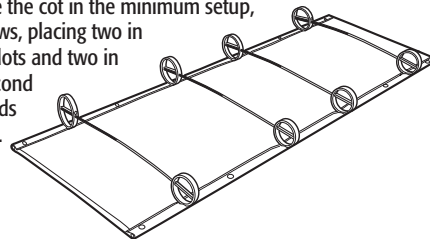

**Tip:** You can place single or twist bows in different slots to create a setup with custom support.

©2013 Cascade Designs, Inc.  
4000 First Avenue South, Seattle, WA 98134 USA  
1-206-505-9500 | 1-800-531-9531

81-411



# THERMA REST<sup>®</sup>

[thermarest.com](http://thermarest.com)