

MUTHA HUBBA™ NX

Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at www.msrgear.com/tents/ownersmanual.


PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, 2 guy cords, 2 tensioners, 8 MSR® Mini-Groundhog™ Stakes, 1 repair sleeve

Watch video setup instructions, including Fast & Light® option, at www.msrgear.com/MuthaHubba


1 PREPARE FOR SETUP

1. Spread tent out and stake out four corners tightly.
2. Assemble poles.

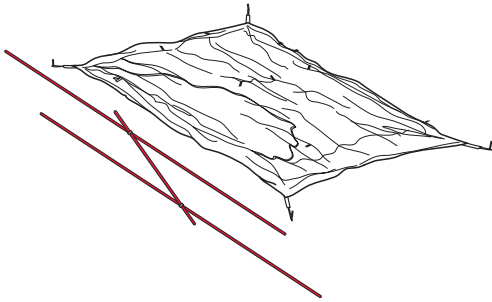


2 ASSEMBLE TENT FRAME

1. Insert tips of long main poles into grommets with color-coded webbing at the stake loops.
2. Attach clips to frame.

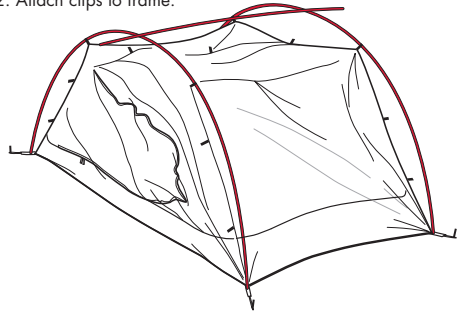


3 ATTACH RIDGE POLE

1. Insert ridge pole into grommets above doors.
2. Attach clips to ridge pole.

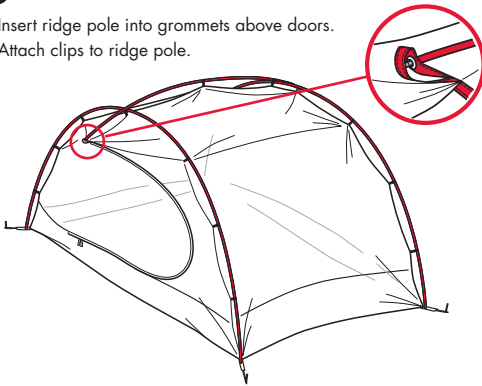

4 ATTACH RAINFLY

1. Lay rainfly over tent, aligning red webbing to red stake loops, gray webbing to gray stake loops. Attach the rainfly's midpoint grommets to ridge pole. Secure rainfly Velcro tabs to main poles.
2. Place rainfly's adjustable loop grommets under the main pole ends at all corners, inserting pole tips into grommets.
3. Stretch out vestibules until taut and stake down, making sure seams align with frame.

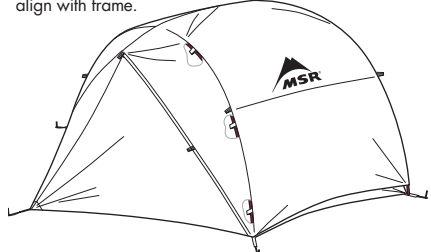

USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Readjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. A footprint can help keep your tent clean, dry and protected from abrasion. Following these tips will prolong the life of your tent. MSR® offers a full line of accessories to secure, maintain and enhance your tent.




MUTHA HUBBA™ NX

Fast & Light® Setup with Rainfly and MSR® Footprint (sold separately).


1 PREPARE FOR SETUP

1. Start by staking out the footprint with the MSR logo facing up.
2. Assemble poles.

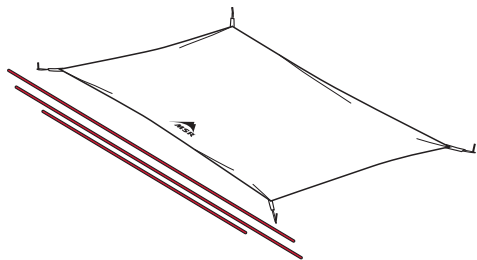


2 ATTACH POLES

1. Insert the poles into the footprint's corner grommets to create the same pole structure as the standard setup.

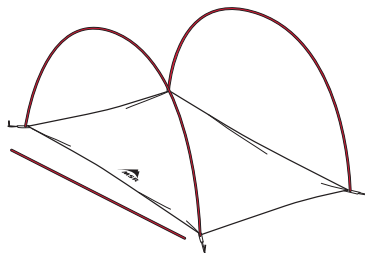

3 SECURE RAINFLY

1. Secure rainfly by attaching the rainfly webbing to the pole tips using the grommets.
2. Insert ridge pole into grommets above vestibule doors on rainfly.
3. Secure any rainfly hook and loop attachments to the poles.

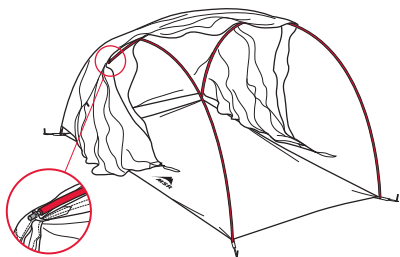

4 SECURE TENT

1. Stake out the tent's vestibules and guy out if necessary.



MOUNTAIN SAFETY RESEARCH®